



# CHORUS

---

## CONTROLS

**VOLUME** - Controls the overall volume of the pedal. Left is less, right is more.

**RATE** - Controls the rate of the modulation. Left is slower, right is faster.

**DEPTH** - Controls the depth of the modulation. Left is less, right is more.

**VIBE TOGGLE** - Switch up to remove the dry signal so that you have a true vibrato effect.

## JACKS

**INPUT** - 1/4" jack on the right side of the pedal.

**OUTPUT** - 1/4" jack on the left side of the pedal.

**POWER** - Requires 9V DC negative center power and consumes 70mA. Do not use more than 9V DC. You will void your warranty.