

## CONTROLS

**MIX** - Controls the volume of the repeats. Left is less, right is more.

**TIME** - Controls the length of the delay from 80ms to 800ms. Left is shorter, right is longer.

**REPEATS** - Controls the amount of feedback or repeats of the delay signal. Left is less, right is more.

**TYPE TOGGLE** - Gives you two different types of delay. Down is an analog voiced delay that also has true analog runaway sounds when the Repeats are turned up. Up is a digital voiced delay for crisp and clean repeats.

## JACKS

**INPUT** - 1/4" jack on the right side of the pedal.

**OUTPUT** - 1/4" jack on the left side of the pedal.

**POWER** - Requires 9V DC negative center power and consumes 71mA. Do not use more than 9V DC. You will void your warranty.