



# MORNING GLORY V4

Transparent low/medium gain overdrive that never gets in the way.  
The overdrive you've always wanted but could never find.

---

## CONTROLS

**VOLUME** - Controls the output volume. Left is less, right is more.

**DRIVE** - Controls the amount of drive or gain just like a tube amp being cranked at high volumes. You will notice that as you turn up the drive, it also adds brightness. Left is less, right is more.

**STONE** - Controls the amount of brightness. Right is brighter, left is darker.

**GAIN TOGGLE** - Engages higher gain mode when flipped up. The LED will turn red to indicate that you are in the higher gain mode.

**BRIGHT CUT SWITCH** - Switch on the right side of the pedal that cuts the highest frequencies in case the overall tone is too bright.

## JACKS

**INPUT** - Lower 1/4" jack on the right side of the pedal.

**OUTPUT** - 1/4" jack on the left side of the pedal.

**RED REMOTE JACK** - The upper jack on the right side of the pedal is for a JHS "Red Remote" switch. When using this switch you can toggle between the higher gain mode and the standard mode on the fly.

**POWER** - Uses 9V DC Negative Center. Do not use more than 9V DC. Your warranty will be voided. 43mA consumption.

**JHS PEDALS**