



AGRO®

Based on the Saturation channel of the popular AG 500 bass head, the AGRO® was designed to give bass players a wide range of overdriven sounds. Capable of producing everything from warm, tube-like overdrive to full on distortion, this pedal will give you the grind you need without sucking out your low end.

Features:

- Contour control: broad spectrum mid scoop centered around 900Hz
- Presence control: + 6dB/-20dB >4kHz
- Gig-saver bypass (signal passes even if your battery dies)
- Power: Nine-volt battery or optional power supply
- Heavy Duty steel construction

Owner's Manual

Manual Version 1.2

I. Functions

A. Top Panel:

LEVEL: Controls the output volume

SATURATION: Controls the amount of saturation

PRESENCE: + 6dB/-20dB >4kHz

CONTOUR: broad range mid scoop @ 900Hz (ccw=max scoop (~20dB) cw=flat)

ENGAGE: Toggles between on and off. The blue LED indicates that the effect is on.

B. Side Panel:

IN: ¼" input

DC IN: This is a standard 2.1mm DC jack. The center terminal polarity is negative.
Compatible with 9-10 VDC regulated power supplies.

OUT: ¼" output

C. Specifications:

Current consumption:7mA
Input impedance:1M Ω (Effect On)
Output impedance:1 K Ω
Maximum Output:+6dBu (1.6VRMS)
Noise Level:-91 dBu 'A' weighted *
External DC Power:9-10 VDC center terminal negative
All specs with knobs set to 12 o'clock except:
* = Saturation set to minimum
+ = nominal input of -20dBu

II. Sample Settings

Please visit our website, www.aguilaramp.com, for sample settings.

III. How to change the battery

This operation can be done quickly and easily with a standard, #2 Philips screw driver!

The battery is easily accessible by loosening the screw on the bottom of the unit. The battery compartment will slide forward and you will be able to see the padded area to insert the battery and attach the battery clips. Once the battery has been replaced, simply slide the compartment back in and tighten the screw.

IV. Warranty Information

The AGRO is covered under limited warranty against defects in materials and workmanship for a period of 3 years. This warranty is non-transferable.

The warranty period starts from the date of purchase from an authorized Aguilar dealer. Please retain your sales receipt as it is necessary to obtain warranty service.

Before sending your unit to Aguilar for repair, you must receive a return authorization number from us. Please contact us via email (techsupport@aguilaramp.com). Do not send any products to us without first receiving a return authorization from Aguilar.

You are responsible for all shipping charges. You must ship the unit to us freight prepaid. We will return the unit to you freight collect. Aguilar Amplification LLC is not responsible for shipping damage, either to or from our service center. Claims must be filed with the carrier.

The only company in the US authorized to perform work under this warranty is Aguilar Amplification LLC of New York, NY.

Warranty service outside the USA: Warranty Service may be different in your country. Please contact the Aguilar distributor in your country for terms and procedures.

Aguilar Amplification LLC
599 Broadway, 7th fl.
NY, NY 10012
www.aguilaramp.com