

electro-harmonix

Triangle Big Muff Pi

Congratulations on your purchase of the Triangle Big Muff. It's a faithful re-creation of the original and dripping with vintage Electro-Harmonix DNA and tone. Dubbed the Triangle Big Muff because of the layout of its Volume, Sustain and Tone controls, this is the one that started it all circa 1969.

OPERATING INSTRUCTIONS

VOLUME Control – Sets the output level

TONE Control – Provides a range of sounds from high treble to deep bass. As you turn the knob clockwise the treble increases and bass decreases.

SUSTAIN Control – Adjusts the amount of sustain and distortion.

Footswitch & Status LED – Use the footswitch to toggle between effect and bypass. The Triangle Big Muff is active when the LED is lit. When the LED is off, the pedal is in true bypass mode.

IN Jack – Plug the output of your instrument or another effects pedal into the ¼" input jack. The input impedance presented at this jack is 122kΩ.

OUT Jack – Connect the Triangle Big Muff's ¼" **OUT** jack to the input of your amplifier or another effects pedal. When the Triangle Big Muff is in bypass mode, the OUT jack is connected directly to the IN jack. The output impedance is nominally 25kΩ.

POWER

Powering the Triangle Big Muff Pi

The Triangle Big Muff Pi may be powered from a 9V battery or an optional 9VDC AC Adapter such as the EHX9.6DC-200 or any Boss® or Ibanez® style AC adapters capable of delivering at least 30mA. Plug the output of the adapter into the 9V power jack located at the top of the pedal. The battery may be left in or taken out when using an AC Adapter. The current draw is approximately 2.2mA at 9VDC.

Please Note: Using the wrong adapter or a plug with the wrong polarity may damage your Triangle Muff Pi and void the warranty.

Changing the Battery

To change the 9V battery, remove the 4 screws on the bottom of the Triangle Big Muff Pi. Take off the bottom plate and change the battery. Avoid touching the circuit board while the bottom plate is off. Replace the bottom plate and screws.

WARRANTY INFORMATION

Please register online at <http://www.ehx.com/product-registration> or complete and return the enclosed warranty card within 10 days of purchase. Electro-Harmonix will repair or replace, at its discretion, a product that fails to operate due to defects in materials or workmanship for a period of one year from date of purchase. This applies only to original purchasers who have bought their product from an authorized Electro-Harmonix retailer. Repaired or replaced units will then be warranted for the unexpired portion of the original warranty term.

If you should need to return your unit for service within the warranty period, please contact the appropriate office listed below. Customers outside the regions listed below, please contact EHX Customer Service for information on warranty repairs at info@ehx.com or +1-718-937-8300. USA and Canadian customers: please obtain a **Return Authorization Number (RA#)** from EHX Customer Service before returning your product. Include—with your returned unit—a written description of the problem as well as your name, address, telephone number, e-mail address, RA# and a copy of your receipt clearly showing the purchase date.

United States & Canada

EHX CUSTOMER SERVICE
ELECTRO-HARMONIX
c/o NEW SENSOR CORP.
47-50 33RD STREET
LONG ISLAND CITY, NY 11101

Tel: 718-937-8300
Email: info@ehx.com

Europe

JOHN WILLIAMS
ELECTRO-HARMONIX UK
13 CWMDONKIN TERRACE
SWANSEA SA2 0RQ
UNITED KINGDOM

Tel: +44 179 247 3258
Email: electroharmonixuk@virginmedia.com



The CE logo indicates that this product has been tested and shown to conform with all applicable European Conformity directives.